

NEWTON ELECTRIC BIKE CONVERSIONS

How to change the batteries on the rear light of the 36 volt battery.



Remove the battery from the rear rack and turn it over. Place a small screwdriver under the tab in the middle of the rear light, and lift it up carefully. The light should move forward slightly.



Pull the lamp firmly away from the battery.

